

Sony Effio E Surveillance Camera

(Built-in OSD)

USER' S MANUAL

Applicable for: Standard Cameras, Dome Cameras, Waterproof IR
Cameras

Thank you for purchasing our products. Please read the
manual carefully before operating

Version: 412710V01 9#

Safety Precaution

	Warning Don't dismantle without authority, becareful thunder striking.	
Note: To avoid thunder-striking, please don't open the backcover, the maintenance must be made by our authorized serviceman.		

 This symbol means that there might exist uninsulated dangerous voltage inside the case, be careful of electric shock.

 This symbol reminds you to pay attention to important operation and maintenance instructions in the accompanied information.

Warning

- In order to prevent damage caused by fire or electric shock, please do not put cameras exposed in the moist environment or rainwater.
- Please make sure the adapter is consistent with product specifications, otherwise it might cause fire, electric shock or damage.
- Pay attention to polarity of the adapter, it might cause some accidents like fires.
- Please don't connect multiple cameras with the same adapter at the same time; overloading of adapter capacity may cause fires.
- Power supply must be firmly fixed so as not to loose to cause fires.
- If the device gets " abnormal smell or smoke", please stop it immediately and contact with our customer service center.
- If the camera doesn't work as usual, please do not dismantle it by yourself. Please contact our local distributor or our maintenance office authorized by our company, otherwise we won't promise warranty.
- Please do not splash water on the product components when cleaning.

Notes

- Do not make the products under great impact or stay away from strong electromagnetic interference and vibration.
- There are some sophisticated parts inside the camera, therefore, during transportation and installation, please avoid the damage cause by stress or severe vibration. For the sake of safety, please do not switch on power before accomplishing all installation.
- Please comply with all electrical safety standards during operation, camera or signal transmission cable should maintain a sufficient distance (50 meters) with high-voltage equipment or cables, if necessary, lightning and thunder protective measures must be taken.
- Please install the camera in well-ventilated environment.
- Please do not make the camera face sunshine or other strong light directly in case of any damage to the lens and the sensor.
- The temperature and humidity range for cameras work are $-10 \sim 50\text{ }^{\circ}\text{C}$, less than 95% separately, please do not start cameras beyond this range.
- To avoid lightning strikes, please make sure the installation of power supply ground line in a good condition.
- To prevent the equipment from damage by shower or splash of water, please do not place the device substances such as liquid.

Contents

I 、 Features.....	6
II 、 InterfaceFunction Introduction	8
2.1 Interface Function Description	8
III、 OSD	9
3.1 Lens type	10
3.2 Shutter / AGC	10
3.3 White Balance.....	12
3.4 Backlight compensation.....	13
3.5 Image adjustment.....	13
3.6 Adaptive Tone Reproduction	14
3.7 Motion Zone Test.....	14
3.8 Privacy zone	16
3.9 Day/Night	17
3.10 NR.....	20
3.11 Camera identification code	21
3.12 Synchronous Mode	22
3.13 Languages	22
3.14 Camera replacement	22
3.15 Return to the previous page	22
3.16 Exit/Save.....	22
IV、 Technical Specification	23
V、 FAQ	25

I、Features

1、SONY CCD New Generation SONY CCD

Adopting the latest Second-generation high-sensitive CCD and DSP, it can receive clear and lucid images even at circumstances with very low illumination.

2、Hi-resolution Video Resolution

Color horizontal resolution can reach 700TVL, B/W horizontal resolution reach 730TVL.

3、Day & Night Switch

Day & Night cameras can switch automatically into color or B/W according to optical changes. When the environment gets down gloomily, the new generation day & night camera uses new generation's original installation magnetism valve type infrared optical filter, will replace automatically for the transparent optical filter. The camera will automatically cut over for clean, sharp black-and-white images.

4、Wide Dynamic Technology

The dynamic camera expands the picture applicable scope, used the state-of-art science and technology, the effective technology which is mainly used in simultaneously photographing when building interior and window spots. Using this kind of technology is able to display indoor and the outdoor picture simultaneously & clearly.

5、2 Digital noise reduction technology

In the camera solidifies the digital noise reduction function toughed, strengthened the signal-to-noise ratio (S/N) and the image clarity, thus the camera can get clear, sharp images under the low light environment.

6、MD Multi-district establishment function

When the user is monitoring, the day and night camera monitor any object on the screen starting to move, will transmit an alarm immediately to the monitoring equipment, causes the user attention the object which moves on screen. The new generation day & night camera has the multi-region migration detection establishment function, and has sensitivity multiple establishments for move detection. Any motion object, at any time even there is no place to run away. The subtle points appears completely.

7、 (PRIVACY) PRIVACY ZONES multi-district establishment function

To carry on the privacy protection in the public region, stemming from the protection by the monitoring either the environment privacy, some special areas or the phantom will camouflage through the privacy the black block to camouflage the image, achieves the privacy protection goal.


With the new generation day & night camera, the user may establish easily the privacy position and size to camouflage the black block. The camera developed many privacy for the user to camouflage the black block specially, caused the privacy protection question in each kind of situation monitoring becomes easy, simple.

8、 OSD control simply & conveniently

The new generation day and night camera has disposed the function rich menu completely, all cameras operations complete completely by the demonstration on monitoring device's menu relaxed debugging. The user carry on superior performance establishments at the greatest degree, conveniently. Thus the camera has been guaranteed with highest quality picture effect.

II、Interface Function Introduction

2.1 Interface Function Description

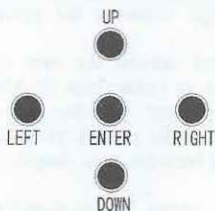

ENTER	This key is Enter key, used to enter and exit the menu operations, which needs to determine.
UP/DOWN	With the UP and DOWN cursor keys to move up and down the menu options.
LEFT/RIGHT	With the LEFT, RIGHT keys move around and modify the parameters of the activities of the menu options.

III、OSD

Press the "OK" button for 2 seconds, the camera will pop up the main menu system (Figure 1)

SETUP MENU	
LENS	MANUAL
SHUTTER/AGC	AUTO
WHITE BAL	ATW
BACKLIGHT	OFF
PICT ADJUST	←
ATR	OFF
MOTION DET	ON
NEXT ←	
EXIT ←	SAVE ALL

SETUP MENU	
PRIVACY	OFF
DAY/NIGHT	←
NR	←
CAMERA ID	OFF
SYNC	INT
LANGUAGE	ENGLISH
CAMERA RESET	
BACK	
EXIT	SAVE ALL

3.1 Lens type

There are 2 types of lenses, respectively: DC lens (DC drive lens), video camera (manual lens). Users can select the lens type according to the using the camera. Press the "left" or "right" button on to choose the lens. When select the auto iris, should choose "Auto" file; users can adjust the "speed" value to adjust the open speed of auto iris. The value smaller, the speed of opening the iris is lower; the value bigger, the speed is faster.

AUTO IRIS	
TYPE	DC
MODE	AUTO
SPEED	0--255
RETURN	

3.2 Shutter / AGC

Move the cursor to "Shutter / AGC"; press the "OK" button to enter the Shutter / AGC sub-menu. Shutter/AGC has two sub-menus: "Automatic", "Manual". Press left-right key, and then press the Enter key to enter sub-menu to set the relevant parameters.

AOTU SETUP

HIGHT LUMINANCE

MODE AUTO IRIS
BRIGHTNESS 0-----255

LOW LUMINANCE

MODE AGC
BRIGHTNESS x0.50
RETURN

High brightness mode has the two choices: "automatic shutter + auto iris, auto iris". User can select according to the lens equipped correspondingly. When using a fixed lens, user must select "Auto Shutter + auto iris" mode. When using auto iris lens, user must select the "Auto Iris" mode.

Brightness can be set between 0-255. User can adjust the brightness of the overall picture, the smaller the value, the darker the screen, the greater the value, the brighter the picture.

Low brightness mode, automatic gain has two options: on and off. Select the brightness between the 0.25-1 to match the appropriate gain factor.

User can choose brightness between 0.25-1, the smaller the value, the darker the screen, illumination worse, greater value, the brighter the picture, the higher illumination.

3.4 Backlight compensation

Backlight mode

In the "Backlight Compensation" menu, press the "left" "right" to select "Backlight compensation, brightness compensation, closed". Users can select the appropriate backlight mode, according to the actual needs.

3.5 Image adjustment

PICT ADJUST	
MIRROR	OFF
BRIGHTNESS	0-255
CONTRAST	0-255
SHARPNESS	0-255
HUE	0-255
GAIN	0-255
RETURN	←

The mirror has two options: On and off. Opening time: image is horizontal mirror, off time: the image is normal. Brightness, contrast, sharpness value can choose between 0-255. The color tone is also the real color of the image color. Users can choose the real colors between 0-255. Gain is of the screen color depth, 0-255 optional. The smaller the value, the color is lighter; the greater value, the more concentrated color.

3.6 Adaptive Tone Reproduction

The ATR (Adaptive Tone Reproduction) function provides gradation compensation to improve the contrast of subjects whose gradation has been lost in cases where, for instance, both low-luminance areas and high-luminance areas exist in the same picture.

ATR	
LUMINANCE	LOW
CONTRAST	LOW
RETURN	↩

Brightness and contrast values can be chose between the "low, medium, high", User can choose an appropriate value to achieve the best image quality.

3.7 Motion Zone Test

In the " Motion Zone Test " menu, press the "left" "right" to select "On". At this point the image will open the motion detection. Then, click "OK" button to enter the " Motion Zone Test" setting sub-menu, to set the detect range and sensitivity settings.

MOTION DET		
DETECT	SENSE	0-127
BLOCK	DISP	ON
MONITOR	AREA	ON
AREA	SEL	1/4
TOP		0-288
BOTTOM		0-288
LEFT		0-468
RIGHT		0-468
RETURN		↩

Back

When the setup is complete, press the "up" and "down" key to move the cursor to the "Back". Then, click "OK" button to return to the implementation for the appropriate functions.

3.8 Privacy zone

In the "privacy shield" menu, press the "left" "right" to select "On". At this point the image will open the Privacy masking. Then, click "OK" to enter "privacy shield" setting sub-menu, you can mask the scope of privacy and sensitivity settings.

PRIVACY		
AREA	SEL	1/4
TOP		0-288
DOWN		0-288
LEFT		0-468
RIGHT		0-468
COLOR		0-8
TRANSP		1.00
MOSAIC		OFF
RETURN	←	

Region Selection

Select the privacy zone region, and set the related zone, there are four available setting zones.

DAY/NIGHT	
BURST	OFF
DELAY CNT	0-255
DAY—NIGHT	0-255
NIGHT—DAY	0-255
RETURN ↩	
Back	Back

Pulse burst signal: on and off, two options.

Delay Control

With this setting the camera achieves the delay time of the transferring: color to black/white or black/white to color. Conversion between the colors is through controlling of the camera's brightness sensor of the scene. When the light is at critical time, the camera may switch the modes back and forth between color and black/white. Setting the delay time function can resolve this problem. When the camera senses the light intensity during this period are in line with the color conversion before the conversion feature, or do not perform.

It is also intended to better protect the camera and allows users to have better image quality.

Day--Night setting

Set the initiate level of the camera's color/black switch, 0-255 adjustable.

Night—Day setting

Set the end level of the camera's black/color switch, 0-255

adjustable.

Note: Set the "Day - Night Set" and "Night - Day set" is to prevent the frequent changes in light caused by switching the camera has been in a state of users. On the choice of the value, do not set to the same value. The same value will lead to frequent switch under the light intensity changing.

Back

When the setup is complete, press the "up" and "down" key to move the cursor to the "Back". Then click "OK" button, perform the back function.

 
(1) Color Mode

In the "night switch" menu, press the "left" "right" key to select "color model". At this point the image color mode will be enforced.

Users can set this function according to actual needs.

(2) Black/White Mode

In the "night switch" menu, press the "left" "right" key to select "black and white model". At this time, the image will be enforced as black and white mode. Then, click "OK" button to enter the "black and white mode" submenu, to set the corresponding parameters.



(1) Pulse

Set the pulse switch, the default value: Off.

3.10 NR

In the "noise reduction" menu click "OK" button to enter the "noise reduction" sub-menu, you can set the corresponding parameters.

Noise reduction is in the case of very low light reduction caused by low-light point of the picture noise to enhance the signal to noise ratio (S / N) and image clarity, and the camera in low light conditions catches clearly sharpness image, the quality can be guaranteed.

NR

NR MODE	Y/C
Y LEVEL	0-15
C LEVEL	0-15
RETURN	↩

Set the noise reduction mode, Y / C, Y, C, off four options. Choose noise reduction corresponds to the modes.

Select Y / C mode, you can adjust the value of brightness and color in noise reduction between 0-15. The larger the value, the smaller the noise is.

Select Y mode, you can adjust the Y level value decomposition.

Select C mode, you can adjust the C level value decomposition.

Back

When the setup complete, click "OK" button to return to the implementation for the appropriate functions.

3.11 Camera identification code

In the "functional camera code" menu, press the "left" "right" to select "On" At this point the camera image will display the name of executive function. Click "OK" button to enter the "camera code" setting sub-menu, you can set the camera name.

CAMERA ID

ABCDEFGHIJKLMNQRSTU

WXYZ0123456789-! " # \$ % &

() _ ^ ` ~ ¨ , . : ; < > ? @ \ * . x + /

CHR1 CHR2

← ↑ ↓ → CLR POS ↵ RETURN ↵

You can set the camera code as numbers, uppercase letters, and related symbols. The length of the names is 15 characters.

"Clear" is for removing the camera name.

"Location" name for the set position. Through the "up, down, left, right" mobile name location, to determine a good location, then press "OK" button to return the name of the Edit menu.

"Return" is the end of the name edit to return to the previous menu.

3.12 Synchronous Mode

Synchronized pattern default for internal synchronization

3.13 Languages

Chinese, Japanese, English, French, Russian, German, Spanish, Portuguese eight language selections.

3.14 Camera replacement

Chooses this item, then presses confirms the key, all parameters will restore the leaving the plant default value.

3.15 Return to the previous page

After establishing completes, according to “on”, “under” the key the cursor moves “returns the previous page”, presses again “determines” in the key execution corresponding returns the first-level menu.

3.16 Exit/Save

After the parameter establishment completes, when it needs to preserve, according to “on”, “under” the key moves the cursor “the withdrawal”, according to left, the right key choice “the preservation” presses “determines” the key, moves “the withdrawal” to press again confirms the key, the withdrawal menu.

PRIVACY	1~8 Zones
Privacy Zone Color	Color 0~Color 7 optional
WDR	Off/On/Auto
WDR Sensitivity	0~10 adjustable
Motion Detection	On / Off (multi-sensitivity settings, alarm time optional)
Alarm Display	Icon
AWB	ATW, PUSH, USER1, USER2, ANTI CR, MANUAL or PUSH LOCK
Image Freeze	On/Off
Special	Rotation/ up-side down /Mirror/Off
Sharpness	0~49 adjustable
GAMMA	0.3~1.0 adjustable
DNR	2D DNR
RS-485 Remote control	Support
Communication Add.	1-254 optional
BPS baud rate	2400/9600/14400/19200/38400
Control Protocol	Pelco-D
Video Output	BNC method
Power Supply	DC12V/AC24V (optional)
Power consumption	2.0 W
Operation Temperature	-10 ⁰ C~+50 ⁰ C

V、 FAQ

1. Q: No image after installation?

- a. Check to connect the power supply correctly, whether the indicating led is always on or not;
- b. Check the video cable, make sure it is workable.
- c. Check if the monitor has been open.

2. Q: Image interference after installation

- a. Check the power quality, if the adapter can't work, please replace another one.
- b. Check if electromagnetic interference exists in the surroundings, please use some anti-interference devices.

3. Q: RS485 can't control menu?

- a. Please check the controller issued code is correct;
- b. Please check if the control circuit is smooth;
- c. Please verify the communication address, baud rate well-matched;
- d. Please check if the connection interface is loose.

4. Q: Camera image can't switch into B/W at night?

Please open the camera menu to see if "Day/Night Switch" is set as AUTO, if not, please change into AUTO.

5. Q: Noise is very obvious at night with low illumination.
please make sure AGC ON.

6. Q: The image color is abnormal.

- a. please make sure if the white balance is correctly set as Auto White Balance.
- b. Please enter the menu to restore factory settings.

7. Q: Image appears to be whiter than usual after installation?

- a. Please check whether the lens aperture was adjusted too large, so that the image appears whiter.
- b. Please verify the camera rear panel, if the regulator potentiometer is adjusted too large.
- c. Check if the brightness of the monitor is too large.

8. Q: When installation, image is not clear or exist dark corners?

- a. Please adjust focus and zoom of the lens. Make sure the focus should be adjusted in a proper way.
- b. Please check if the lens is clean.