



5 Megapixel Network Camera

User Manual

Please read this manual carefully before use of the products and preserve for reference purposes. Specifications are subject to change without notice*

- Please use the specified power supply to connect.
- Do not attempt to disassemble the camera; in order to prevent electric shock, do not remove screws or covers.
- There are no user-serviceable parts inside. Please contact the nearest service center as soon as possible if there is any failure.
- Avoid misuse and incorrect operation, avoid physical damage by force or vibration, and avoid applying heavy pressure which can cause damage to product.
- Do not use corrosive detergent to clean main body of the camera. If necessary, please use soft dry cloth to wipe dirt; for hard contamination, we recommend screen or lens cleaner and a microfiber cloth.
- Avoid aiming the camera directly towards extremely bright objects, such as the sun, as this may damage the image sensor.
- Please follow the setup, installation and care instructions
- Please operate the camera at the recommended temperatures and humidity. Do not install the camera in an environment that is too hot, too cold or too wet.
- Do not reverse the camera or the reversing image will be received.
- Do not power the camera beyond the power supply's stipulations.
- Keep away from heat sources such as radiators, heat registers, stove, etc. which may expose the camera to extreme heat.
- Do not expose the product to the direct airflow from an air conditioner for the camera may become too wet and cold.
- Product Instructions and Specifications are subject to change without notice. We may reserve the rights of amending any typographical errors and/or any inconsistencies with the latest version, software upgrades and product improvements, interpretation, and modifications. These changes will be published in the latest version of the manual without special notification. See product manufactures for additional information.
- In this product manual the company names of Microsoft, Apple and Google will be used. The pictures and screenshots in this manual are used ONLY to explain the usage of our product. The ownerships of trademarks, logos and other intellectual properties related to Microsoft, Apple and Google belong to the above-mentioned companies.
- This manual is suitable for Sibell's IR water-proof network camera. All pictures and examples used in the manual are for reference only.

1Introduction	6
2IE Remote Access	7
2.1LAN	7
2.1.1Access through IP-Tool	7
2.1.2Directly Access through IE	8
2.2WAN	10
3Remote Preview.....	12
3.1The Remote Preview Interface	13
3.2Playback.....	14
3.3Snap Pictures	14
4Remote Live Surveillance	15
4.1System Configuration.....	16
4.1.1Basic Information	16
4.1.2Date & Time	16
4.1.3SD Card.....	17
4.2Video Configuration	17
4.2.1Camera.....	17
4.2.2Video Stream	18
4.2.3OSD Configuration.....	19
4.2.4Video Mask	19
4.2.5ROI Configuration	20
4.3PTZ Configuration.....	21
4.3.1Protocol	21
4.3.2Preset Configuration	22
4.4Alarm Configuration	22
4.4.1Motion Detection Area	22
4.4.2Motion Detection Trigger	23
4.4.3Motion Detection Schedule.....	24
4.4.4Alarm Input Trigger	24
4.4.5Alarm Input Schedule	25
4.4.6Alarm Out.....	26
4.4.7Alarm Server.....	26
4.5Network Configuration.....	26
4.5.1Port.....	26
4.5.2IP Address	27
4.5.3Server Configuration	27
4.5.4IP Notify	28
4.5.5DDNS Configuration.....	28
4.5.6RTSP	29
4.5.7UPNP.....	30
4.5.8Mail configuration	30


4.5.9FTP Setting.....	31
4.6Advanced Configuration.....	32
4.6.1User Configuration	32
4.6.2Security Configuration.....	33
4.6.3Configure Backup & Restore	34
4.6.4Reboot.....	34
4.6.5Upgrade.....	35
5Video Search.....	36
6Q & A.....	38
Appendix	40
Appendix 1 — Installation of Water-proof Rubber Plug	40
Appendix 2 — Specifications	40

This IP-CAMERA is designed for high performance CCTV security solutions. It adopts state of the art video processing chips. It utilizes some of the most advanced technologies in the market, such as video encoding and decoding technology, complies with the TCP/IP protocol, SoC, and more, in order to create a security system that is both stable and reliable. This product is widely used in security solutions such as banks, telecommunication systems, electrical power plants, judicial systems, factories, warehouses, suburban communities and more. In addition, it is also an ideal choice for surveillance sites with mid-grade to high risks surveillance situations.

Main Features

- 5MP (2592×1944) full real time coding
- Max. resolution: 2592×1944
- ICR auto switch, true day/night
- 3D DNR, digital WDR
- ROI coding
- Supports smart phone, iPad, remote monitoring

Surveillance Application

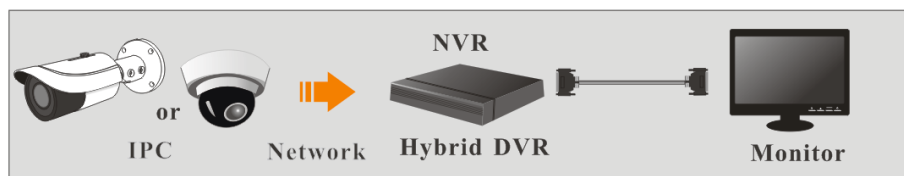


You may connect IP-Cam via LAN (Local Area Network) or WAN (Wide Area Network). The details are as follows:

2.1 LAN (Local Network)


In LAN, there are two ways to access IP-Cam: 1. access through IP-Tool; 2. directly access through IE browser.

2.1.1 Access through IP-Tool

Network connection:

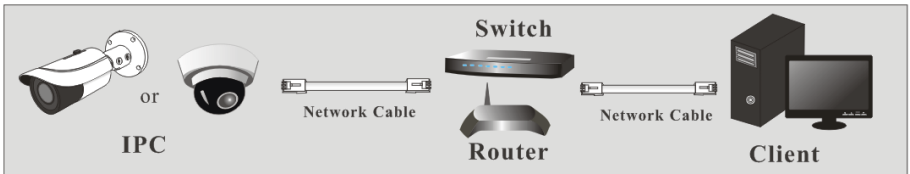

- ① Make sure the PC and IP-Cam are connected to the LAN and the IP-Tool is installed in the PC from the CD.
- ② Double click the IP-Tool icon on the desktop to run this software as shown below:

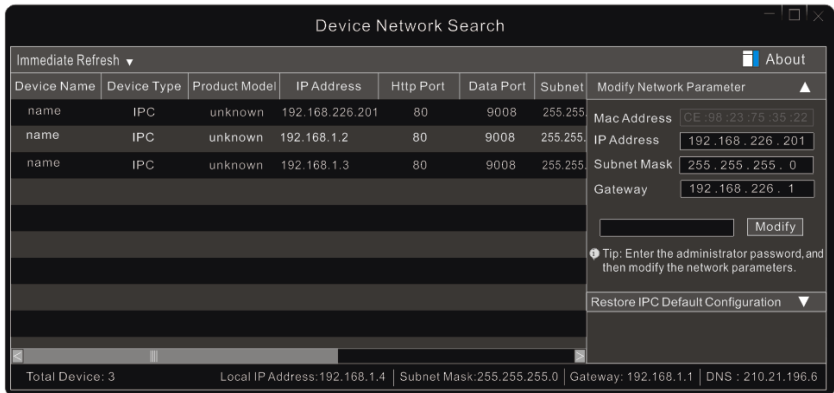

- ③ Modify the IP address. The **default** IP address of this camera is **192.168.226.201**. Click the information of the camera listed in the above table to show the network information on the right hand. Modify the IP address and gateway of the camera and make sure its network address is in the same local network segment as the computer's. Please modify the IP address of your device according to your local network configuration.

For example, the IP address of your computer is 192.168.1.4. So the IP address of the camera shall be changed to 192.168.1.X. After modification, please input the password of the administrator and click “Modify” button to modify the setting.



The default password of the administrator is “**123456**”.

④ Double click the IP address and then the system will pop up the IE browser to connect IP-CAM. IE browser will auto download the Active X control. After downloading, a login window will pop up as shown below.

Input the username and password to log in.



The default username is “**admin**”; the default password is “**123456**”.

2.1.2 Directly Access through IE

The default network settings are as shown below:

IP address: **192.168.226.201**


Subnet Mask: **255.255.255.0**

Gateway: **192.168.226.1**

HTTP: **80**


Data port: **9008**

You may use the above default settings when you log in the camera for the first time. You may directly connect the camera to the computer through network cable.

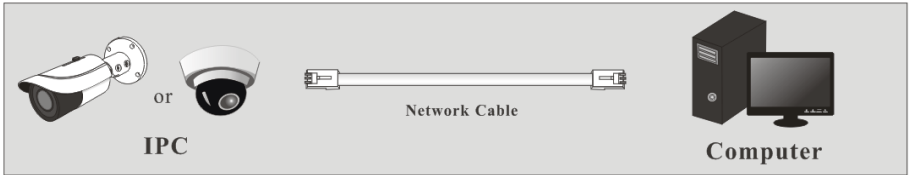

① Manually set the IP address of the PC. The network segment should be as the same as the default settings of the IP camera. Open Network and Sharing Center in Windows Control Panel. Click “Change adapter settings,” Right-click “Local Area Connection” and choose Properties, Left-click on “Internet Protocol TCP/IP v4,” and click the properties button.

Select “Use the following IP address” and manually enter the following information:
IP address: 192.168.226.4
Subnet Mask: 255.255.255.0

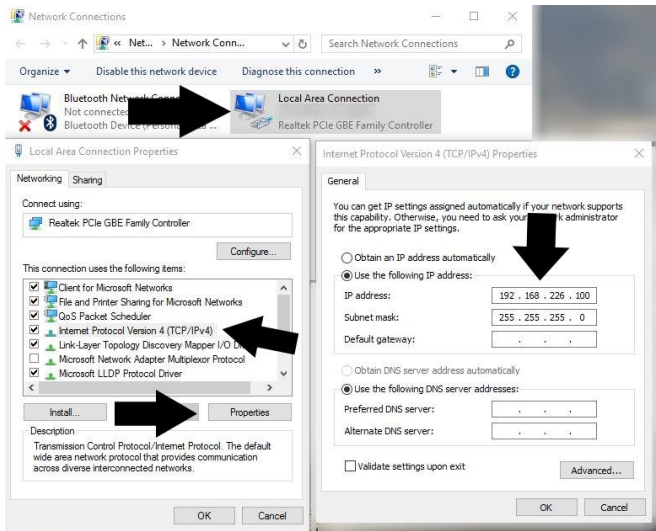


② Open the IE browser and input the default address of IP-Cam and connect. The IE browser will download Active X control automatically.

****IMPORTANT:** You must configure IE Internet options before the Active X control will install. Proceed to do the following in Internet Explorer:
Click on Tools (cog wheel top right corner) > Internet Options > Security > Click Custom

level > Scroll to **DOWNLOAD UNSIGNED ACTIVE X CONTROLS** > set it to **PROMPT**
> Click OK.

2.2 WAN (Router)

➤ **Access through the router**

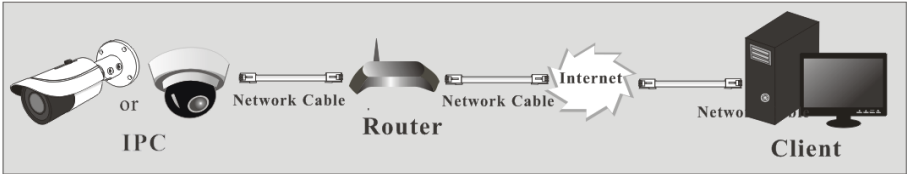

① Make sure the camera is well connected via LAN and then login the camera via LAN and go to Config➤Network Config➤Port menu to set the port number. ****Note:** Only change the ports if there will be more than 1 camera installed at the location.

The screenshot shows the 'Network basic config' window. It has three input fields for port numbers:

Port Type	Port Number
HTTP Port	80
Data Port	9008
RTSP Port	554

Port Setup

②Go to Config ➔Network Config➔IP Address menu to modify the IP address.

The screenshot shows the 'IP Config' window. It has two main sections: 'Obtain an IP address automatically' (disabled) and 'Use the following IP address' (selected). The 'Use the following IP address' section has three input fields: IP Address (192 . 168 . 1 . 201), Subnet Mask (255 . 255 . 255 . 0), and Gateway (192 . 168 . 1 . 1). Below this, there is another section for DNS servers: 'Obtain DNS server address automatically' (disabled) and 'Use the following DNS server' (selected). This section has two input fields: Preferred DNS server (192 . 168 . 1 . 1) and Alternate DNS server (8 . 8 . 8 . 8).

IP Setup

③ Go to the router's management interface through IE browser to forward the IP address and port of the camera. Login to the router by typing in the default gateway address into the web address bar of the browser (ex. <http://192.168.1.1>). Navigate to

the Port forwarding, Virtual Server, Custom service, or Pinhole section in the router.


Port Range					
Application	Start	End	Protocol	IP Address	Enable
1	9007	to 9008	Both	192.168.1.201	☒
2	80	to 81	Both	192.168.1.201	☒
3	10000	to 10001	Both	192.168.1.166	☐
4	21000	to 21001	Both	192.168.1.166	☐

Router Setup

④ Open the IE browser and input its WAN IP and http port to access. You can find the WAN IP address under the router status page. It is also called the “Internet IP address.”

➤ Access through PPPoE dial-up

Network connection

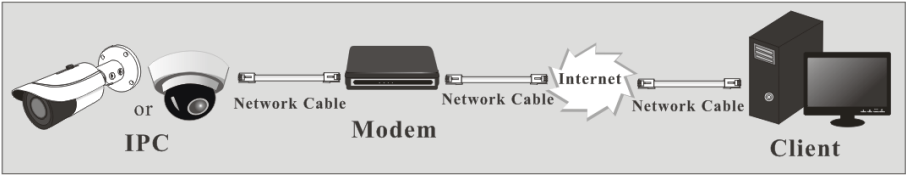

You may access the camera through PPPoE auto dial-up. The setting steps are as follow:

- ①Go to Config→Network Config→Port menu to set the port number.
- ②Go to Config →Network Config→IP Address menu. Check “PPPoE” and then input the user name and password which you can get from your internet service provider.

PPPoE Config

☒ PPPoE


User Name

Password

- ③Go to Config →Network Config→DDNS Config menu. Before you configure the DDNS, please apply for a domain name first. Please refer to 4.4.5 DDNS Configuration for detail information.
- ④Open the IE browser and input the domain name and http port to access.

➤ Access through static IP


Network connection

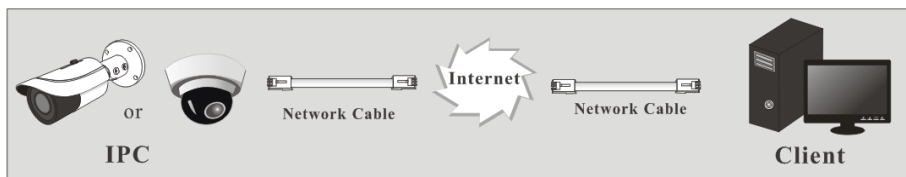

The setting steps are as follow:

- ①Go to Config→Network Config→Port menu to set the port number.
- ②Go to Config →Network Config→IP Address menu to set the IP address. Check “Use the following IP address” and then input the static IP address and other parameters.
- ③Open the IE browser and input its WAN IP and http port to access.

3.1 The Remote Preview Interface

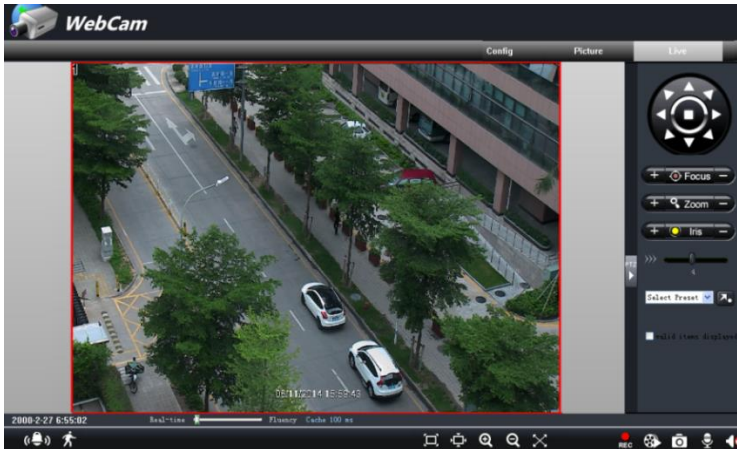

Icon	Description	Icon	Description
	Motion alarm indicator icon		Sensor alarm indicator icon
	Fix size		Start/Stop record
	Actual size		Playback
	Zoom in		Snap
	Zoom out		Talk
	Full screen		Enable audio

- When motion detection alarm is triggered, the people icon will turn red.

Right click to pop up a pull-down list as shown below:

Stream: Three streams are optional.

Turn off the live: Click this item to close present live preview.

Enable audio: Open the volume.

Full screen: The live preview picture will be full-screen display.

Double click or click right mouse to return to the previous interface.

Online user: Display the current user connecting to the device.

System information: Display the device information: device name, firmware version, software build date, kernel version and hardware version.

```

1 2592x1944 25fps
2 704x576 25fps
3 352x288 25fps
Turn off the live

```


```

Enable audio
Full Screen
Online User
System Information

```


Click PTZ extended button to unfold PTZ control panel. In remote preview interface, you can view the image from every direction by controlling PTZ panel.

The descriptions of the control panel are as follows:

Button	Description
	to rotate the dome upwards ; to rotate the dome downwards; to rotate the dome towards left; to rotate the dome towards right ; to rotate the dome diagonally up-left; ; to rotate the dome diagonally up-right; to rotate the dome diagonally down-left; to rotate the dome diagonally down-right; to stop rotating the dome.
	Drag the scroll bar to adjust rotating speed of the dome.
	Focus button. Click button to have long focus and click to have short focus so that you can adjust the image clearly.
	Zoom button. Click to zoom in the image; click to zoom out the image.
	Iris button. Click to increase light of the dome; click to decrease light of the dome.

3.2 Playback


Before you play the record files, please make sure you have recorded. You can click  button to record. Then click  button to pop up a video player. Double click the record file to play the video as shown below.

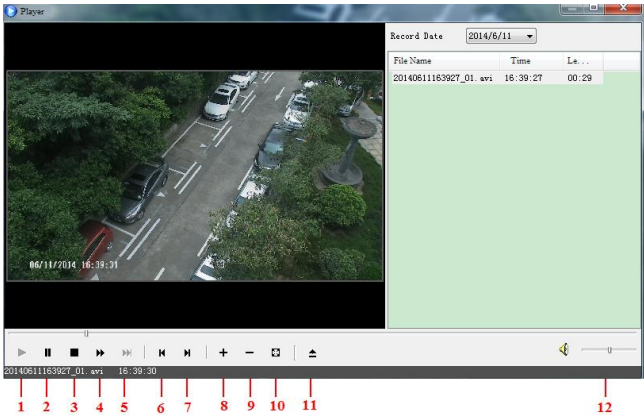

1	Play	5	Next frame	9	Zoom out
2	Pause	6	The previous file	10	Full screen
3	Stop	7	The next file	11	Path
4	Forward	8	Zoom in	12	Volume


3.3 Snap Pictures

Select the picture number, and then click “Snap”  icon as shown below:

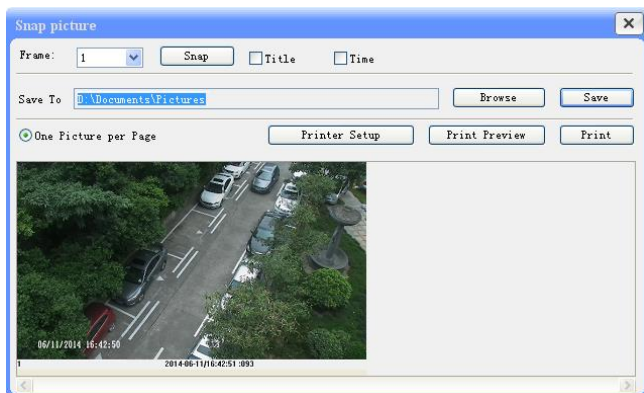

Single Snap

Select the image frame number pull down list box, such as 2, and check “Title” and “Time” to show capture title and time on the snap pictures simultaneously.

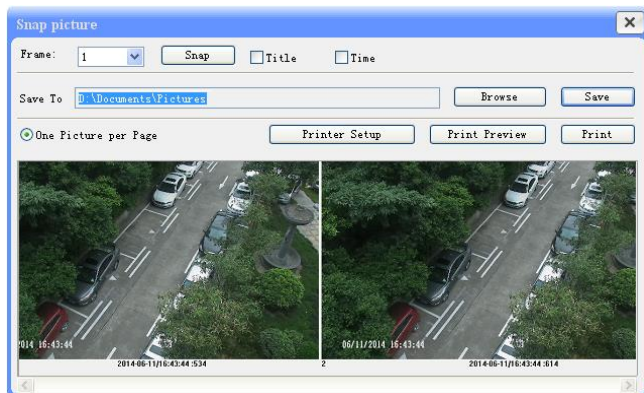

Multi-picture Snap

Functions of remote configurations include System Configuration, Video Configuration, PTZ Configuration, Alarm Configuration, Network Configuration and Advanced Configuration. You should select the menu on the left and then set up the relative parameters.

4.1 System Configuration

The “System configuration” includes three submenus: Basic Information, Date & Time and SD card.

4.1.1 Basic Information

In the “Basic Information” interface, you can set up the device name and can also check the relative information of the server.

Setting steps:

1. Clicking the “Config” icon will appear the menu list.
2. Clicking the “Basic Information” will pop up a window as shown below:
3. Input the name of the device in the “Device name” text box.
4. Press the “Save” button to save the settings.

System Information			
Software Version	3.4.2.1 beta3	Software Build Date	2015-6-5 (YYYY-MM-DD)
Kernel Version	20150426	Hardware Version	1.3
MAC	00:18:AE:52:66:53	Onvif Version	2.3
Device name	number2	Maximum number of	10


Please refer to the following table for parameters and instructions of server basic configuration.

<i>Parameter</i>	<i>Meaning</i>
Software version	The software of the device
Software build date	The software build date of the device
Kernel version	The kernel version of the device
Hardware version	The hardware version of the device
Mac Address	MAC address of device
Maximum number of user	Support max 10 users to access
Device name	Name of the device.

4.1.2 Date & Time

Setting steps:


1. Go to System Config→Date & Time menu as shown below.

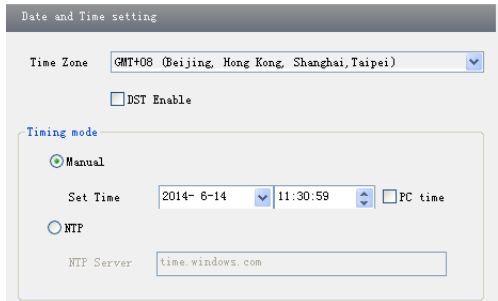

- 2. Set time zone.
- 3. Enable DST mode as required.
- 4. Set time. You may set time manually or enable NTP.

4.1.3 SD Card

1. Go to “System Configuration” → “SD Card” as shown below:

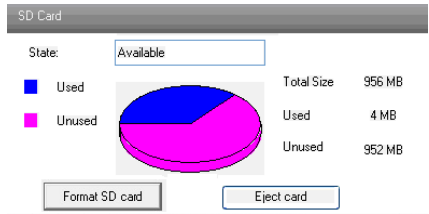

The first time you used the SD card, you should click “Format SD card”. Click “Eject card” to stop writing data to SD card. Then the SD card can be ejected safely.



Note: Using of SD card function should be coordinated with motion or sensor alarm. When alarm is triggered, the system will automatically snap picture and save the picture into SD card.


4.2 Video Configuration

Camera Configuration includes six submenus: Camera, Video Stream, OSD Config, Video Mask, ROI Config and Lens Control.

4.2.1 Camera

Setting steps:


1.Go to “Video Configuration” → “Camera” interface as shown below.

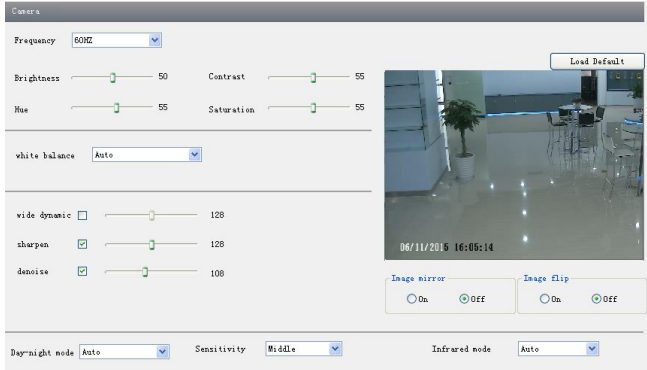

2. You may adjust frequency, brightness, contrast, hue and saturation of the picture.
3. Select white balance mode.
4. Wide dynamic, sharpen, and denoise are adjustable.
5. Set day-night mode, sensitivity, and infrared mode.
6. You may enable the image mirror and image overturn function.
7. Press the “Save” button to save the settings.

4.2.2 Video Stream

Go to “Video configuration”→ “Video Stream” to see an interface as shown below.

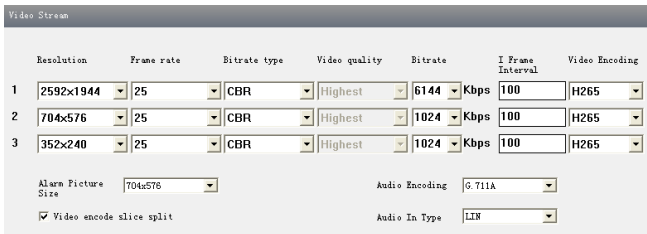

Three video streams can be adjustable.

Resolution: The higher the resolution is, the clearer the image is.

Frame rate: The higher the frame rate is, the more fluency the video is. However, more storage room will be taken up.

Bitrate type: Including CBR and VBR. CBR means that no matter how changeable the video resources are, the compression bitrate keeps constant. This will not only facilitate the image quality better in a constant bitrate but also help to calculate the capacity of the recording. VBR means that the compression bitrate can be adjustable according to the change of the video resources. This will help to optimize the network bandwidth.

Video Quality: When VBR is selected, you need to choose image quality. The higher the image quality you choose, the more bitrate will be required.

Bitrate: Please choose it according to the actual network situation.

I Frame interval: It is recommended to use the default value. If the value is to high, the read speed of the group of pictures will be slow resulting in the quality loss of the video.

Video encoding profile: Baseline and main profile are optional. Baseline profile is mainly used in interactive application with low complexity and delay. Main profile is mainly used for higher coding requirement.

Alarm picture size: Please select it according to the actual situation.

Video encode slice split: If enabled, you may get more fluent image even though using the low-performance PC.

Audio Encoding: G.711A and G.711U are selectable.

Audio In Type: MIC and LIN are selectable.

4.2.3 OSD Configuration


Go to “Video Config” → “OSD Config” menu to display the interface as shown below.



You may set time stamp, device name and custom OSD here. Drag the time stamp and custom OSD to set their position. Then press the “Save” button to save the settings.

4.2.4 Video Mask

Go to “Video Config” → “Video Mask” menu to display the interface. You can set 4 mask areas at most.

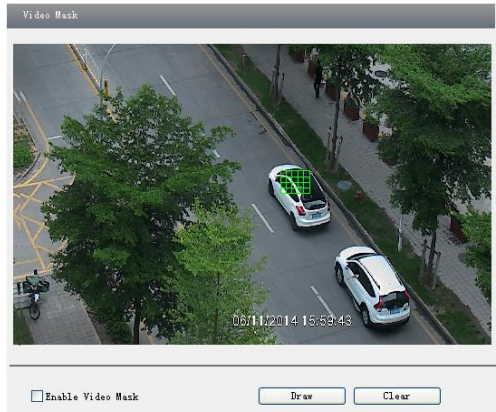

To set up video mask

1. Enable video mask.
2. Click “Draw” button and then drag the mouse to draw the video mask area.
3. Click “Save” button to save the settings.
4. Return to the live to see the following picture.



Clear the video mask:


Go to video mask menu and then click “Clear” button to delete the current video mask area.

4.2.5 ROI Configuration


To set up ROI

1. Go to Video Config→ROI Config menu.
2. Check “Enable” and then click “Draw” button.
3. Drag the mouse to set the ROI area.
4. Set the level.

5. Click “Save” button to save the settings.

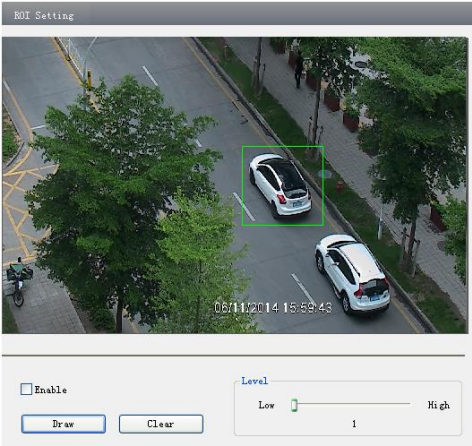

Now, you will see the selected ROI area is clearer than other areas, especially in low bitrate condition.

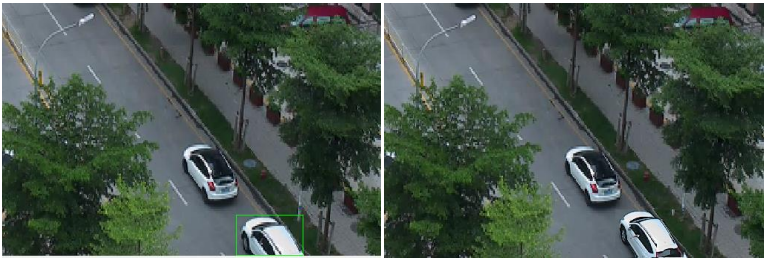


4.3 PTZ Configuration

PTZ Configuration includes two submenus: Protocol and Preset.

4.3.1 Protocol


1. Go to “PTZ Configuration”→ “Protocol” interface as shown below:

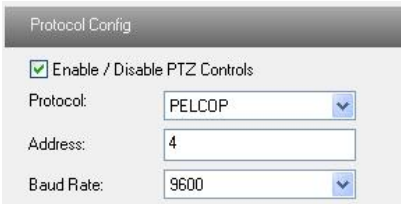

2. Input the protocol, address, and baud rate according to the speed dome.

4.3.2 Preset Configuration

1. Go to “PTZ Configuration”→ “Preset” to see an interface as shown below:

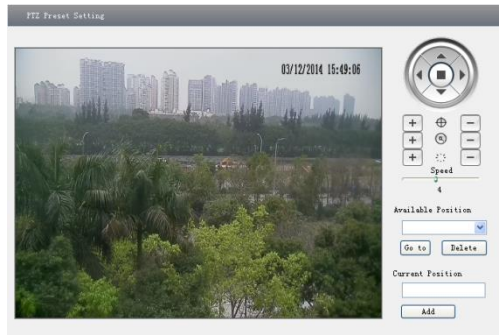

Button	Meanings
	to rotate the dome upwards; to rotate the dome downwards; to rotate the dome towards left; to rotate the dome towards right; to stop rotating the dome.
	Focus button. Click button to have long focus; click button to have short focus.
	Zoom button. Click button to zoom in the locale picture ; click button to zoom out the locale picture.
	Iris button. Click button to increase light of the dome; click button to decrease the light of the dome.
	Drag the scroll bar to adjust rotating speed of the dome.

2. Input the preset number and set its position by controlling PTZ control panel and then click Add button to add preset point into the Available position list.
3. Select the preset in the pull down list of the Available position and click Go to button to move the dome to this preset point; click Delete button to delete the checked preset point.
4. After finishing setting, click Save button to save the settings.


4.4 Alarm Configuration

Alarm configuration includes seven submenus: Motion Detection Area, Motion Detection Trigger, Motion Detection Schedule, Alarm Input Trigger, Alarm Input Schedule, Alarm Out and Alarm Server.

4.4.1 Motion Detection Area


1. Go to “Alarm configuration”→ “Motion Detection Area” to see an interface as below.
2. Move the “Sensitivity” scroll bar to set up the motion trace sensitivity.
3. Check the “Add”, press the “Ctrl” button and move mouse to select the motion detection

- area. Select “Erase” and move the mouse to clear all motion detection area.
4. Press the “Save” button to save the settings.

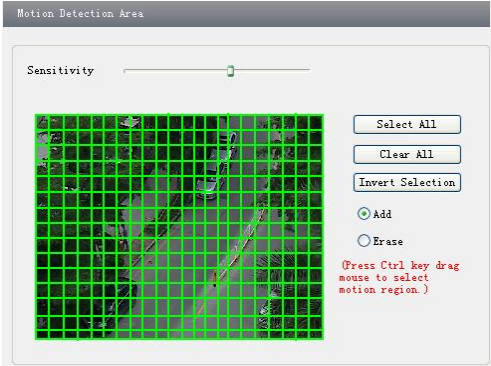

4.4.2 Motion Detection Trigger

1. Go to “Alarm Configuration”→ “Motion Detection Trigger” to display an interface as shown below.
2. Check “Enable alarm” check box. Then motion based alarm is activated.
3. Set alarm holding time.
4. Set alarm trigger options.

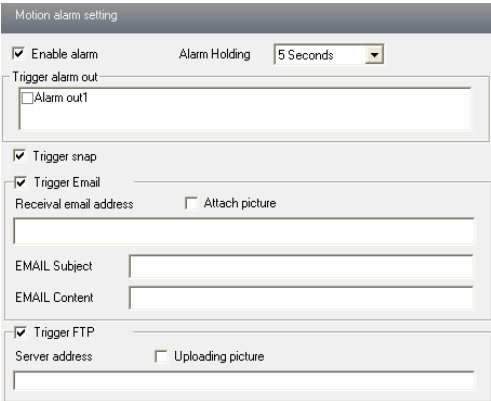

- Alarm Out:** If selected, this would trigger the external relay output on detecting a motion based alarm.
- Trigger Snap:** If selected, the system will snap images on an alarm and save them in SD card.
- Trigger Email:** If the email and attach picture check-boxes are checked (Email address shall be set first in the Mail config interface), the triggered snap pictures and event will be sent to the designated email address(es).
- Trigger FTP:** If “Uploading picture” is checked, the triggered snap pictures will be sent into FTP server address. Please refer to FTP configuration chapter for more details.

5. Press the “Save” button to save the settings.

4.4.3 Motion Detection Schedule

Go to “Alarm configuration”→ “Motion Detection schedule” interface as shown below.

The screenshot shows the "Motion schedule setting" window. At the top, there are two radio buttons: "Erase" (unselected) and "Add" (selected). Below this is the "Week Schedule" section, which contains seven rows for the days of the week: Sunday, Monday, Tuesday, Wednesday, Thursday, Friday, and Saturday. Each row has a horizontal timeline from 0 to 24 hours. Green bars indicate the scheduled alarm periods. For Sunday, Monday, Tuesday, Thursday, Friday, and Saturday, the entire 24-hour period is covered by a green bar. For Wednesday, a green bar covers the period from approximately 1:00 to 23:00. Below the week schedule is the "Holiday Schedule" section. It includes a "Date:" label, a date input field showing "12/17/2009", and "Add" and "Delete" buttons. To the right of these buttons is an empty rectangular box. At the bottom, there is a "Holiday" row with a 24-hour timeline, which currently has no green bar.

Week schedule

You can set the alarm time from Monday to Sunday for alarm everyday in one week.

Add: Add the schedule for a special day.

Erase: Delete holiday schedule.

Day schedule

You can set alarm time for alarm in some time of special day, such as holiday.

1. Select a date at the “Date” pull down list, press “Add” button to add that date to the list box on the right side and then move the scroll bar to set the schedule of that day.

2. Select a date in the list box on the right side, and press “Erase” to remove the schedule on that day.

Press the “Save” button to save the settings.

Note: Holiday schedule is priority to Week schedule.

4.4.4 Alarm Input Trigger

1. Enter “Alarm Configuration”→ “Alarm Input Trigger” to see a screen as shown below:

Sensor alarm setting

Sensor: Sensor 1

Sensor Name: Sensor1 Alarm Type: NO

☐ Enable alarm Alarm Holding: 20 Seconds

Trigger alarm out:

☐ Alarm out1

☒ Trigger snap

☐ Trigger Email

☐ Trigger FTP

Apply settings to: All Copy

2. Select the sensor at the “Sensor” pull down list and set the sensor name and alarm type: NO and NC.
3. Enable alarm and select alarm holding time.
4. Set alarm trigger options. The setting steps are the same as that of motion detection trigger. Please refer to motion detection trigger chapter for details.
5. Apply settings to all by clicking “Copy” button to quickly set the same settings for all sensors.

4.4.5 Alarm Input Schedule

Go to “Alarm Configuration”→“Alarm Input Schedule” as shown below:

Sensor schedule setting

Sensor: Sensor1 Erase Add

Week Schedule

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
Sun	[Green bar]																								
Mon	[Green bar]																								
Tue	[Green bar]																								
Wed	[Green bar]																								
Thu	[Green bar]																								
Fri	[Green bar]																								
Sat	[Green bar]																								

Holiday Schedule

Date: 7/ 1/2013 Add Delete

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
Holiday	[Green bar]																								


Copy settings

Apply settings to: All Copy

1. Select the sensor.
2. The following setup steps are similar to Motion Detection Schedule’s. Please refer to Motion Detection Schedule chapter for more details.

4.4.6 Alarm Out

1. Go to “Alarm configuration”→ “Alarm output” as shown below:

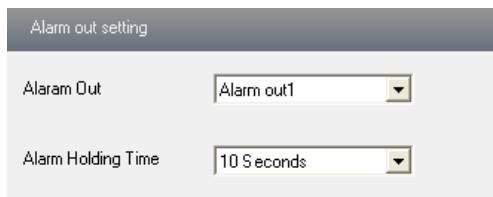

Alarm out setting

Alarm Out


Alarm Holding Time

2. Select alarm holding time and alarm name at the “Alarm out” and “Alarm holding time” pull down list box respectively.
3. Press the “Save” button to save the settings.

4.4.7 Alarm Server

Go to “Alarm configuration”→ “Alarm Server” interface as shown below.

You may input the alarm server address and port. When the alarm happens, the camera will automatically transfer the alarm event to the alarm server. If the alarm server is not used, there is no need for you to configure here.

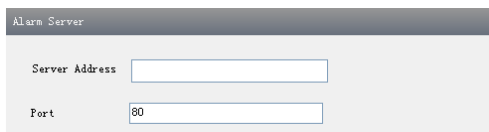

Alarm Server

Server Address


Port

4.5 Network Configuration

Network configuration includes nine submenus: Port, IP Address, Server Configuration, IP Notify, DDNS Config, RTSP, UPNP, Mail configuration, and FTP.

4.5.1 Port

1. Go to “Network config”→ “Port” to see the interface as shown below. *Note: you do not need to change the ports if only 1 camera is being installed.

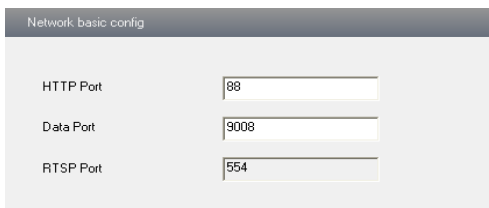

Network basic config

HTTP Port

Data Port

RTSP Port

2. Input port number for IE access in the “HTTP Port” textbox.
3. Input the port number for audio & video transmission in the “Data Port” textbox.

4.5.2 IP Address

1. Go to “Network Configuration”→ “IP Address”.

IP Config

☐ Obtain an IP address automatically

☒ Use the following IP address

IP Address

Subnet Mask Gateway

☐ Obtain DNS server address automatically

☒ Use the following DNS server

Preferred DNS server: Alternate DNS server:

PPPoE Config

☐ PPPoE

User Name Password

There are two options for IP setup: obtain an IP address auto by DHCP protocol and use the following IP address. You may choose one of options as required.

Use the following IP address: display the IP address, subnet mask, gateway and DNS of the device.

PPPoE: User needs to input the user name and password for dial-up internet.

Firstly, log in IE clients and then enter user name and password of PPPoE, save the setting and exit. Secondly, set up IP address change notice. Thirdly, connect with Modem. Then the device will dial up internet automatically.

Press the “Save” button to save the settings.

4.5.3 Server Configuration

Go to “Network Configuration”→ “Server Config”.

Server Config

☒ Do you want IPCamera to connect Server

Server Address

Server Port

Device ID

1. Check “Do you want IP Camera to connect Server”.

2. Check the IP address and port of the transfer media server in the CMS/NVMS. Then enable

the auto report in the CMS/NVMS when adding a new device. Next, self-define the device ID and input the remaining information of the device in the CMS/NVMS.


3. Input the above-mentioned server IP, server port and device ID in the responding boxes.

4. Click “Save” button to save the settings.

4.5.4 IP Notify

1. Go to “Network Configuration”→ “IP Notify” to see a tab as shown below.


2. If the “Enable notifying change of IP” is selected, when the IP address of the device is changed, a new IP address will be sent to the appointed mailbox automatically; If “FTP” is selected, when the IP address of the device was changed, a new IP address will be sent to FTP server.

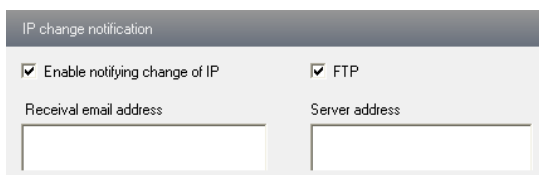

The screenshot shows a window titled "IP change notification". It contains two checked checkboxes: "Enable notifying change of IP" and "FTP". Below these are two text input fields labeled "Receival email address" and "Server address".

4.5.5 DDNS Configuration


1. Go to “Network Configuration” → “DDNS Configuration” tab as shown below.

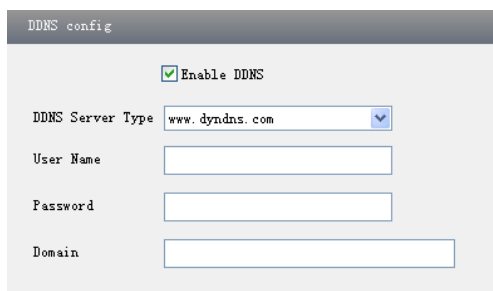

The screenshot shows a window titled "DDNS config". It has a checked checkbox for "Enable DDNS". Below this are four fields: "DDNS Server Type" (a dropdown menu showing "www.dyndns.com"), "User Name", "Password", and "Domain", each with a corresponding text input box.

2. Apply for a domain name. Take WWW. dvr dydns.com for example.

Input www.dvr dydns.com in the IE address bar to visit its website. Then click “Registration” button to register as shown below.

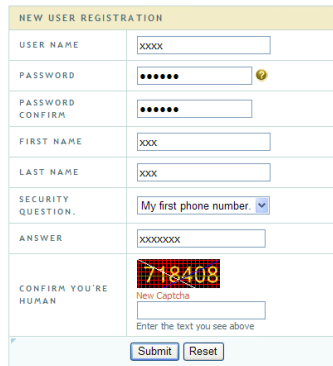

NEW USER REGISTRATION

USER NAME:

PASSWORD: 

PASSWORD CONFIRM:

FIRST NAME:

LAST NAME:

SECURITY QUESTION: 

ANSWER:

CONFIRM YOU'RE HUMAN: 

 Enter the text you see above

Create domain name.

You must create a domain name to continue.

Domain name must start with (a-z, 0-9). Cannot end or start, but may contain a hyphen and is not case-sensitive.

After you successfully request your domain name, you will see your domain in the list.

Search by Domain:

Click a name to edit your domain settings.

NAME	STATUS	DOMAIN
654321ABC		654321abc.dvrdyns.com

Last Update: *Not yet updated* IP Address: 210.21.229.138


[Create additional domain names](#) ...

3. Select the server type and then input the username, password and domain name you apply for in the DDNS configuration interface.

4. Click “Save” button to save the settings.

4.5.6 RTSP

Go to “Network Configuration”→ “RTSP” interface as shown below.

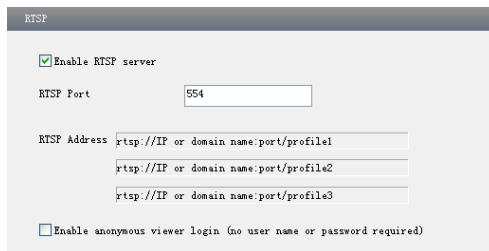

RTSP

☒ Enable RTSP server

RTSP Port:

RTSP Address:

☐ Enable anonymous viewer login (no user name or password required)

Select “Enable RTSP server”.

RTSP Port: Access Port of the streaming media. The default number is 554.


RTSP Address: The RTSP address you need to input in the media player.

You can also choose to enable anonymous viewer login.

4.5.7 UPNP

Go to “Network Configuration”→ “UPNP” interface as shown below.

Select “Enable UPNP” and then input friendly name.

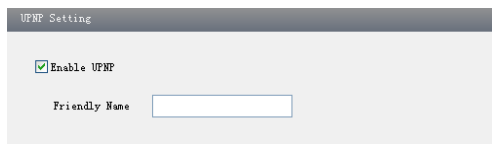The image shows a web interface titled "UPNP Setting". It contains a checkbox labeled "Enable UPNP" which is checked. Below this is a label "Friendly Name" followed by an empty text input field.

Then double click “Network” icon on the desktop of the PC to see an icon with the friendly name and IP address of the camera. You may quickly access the device by double clicking this icon.

4.5.8 Mail configuration

Go to “Network Configuration” → “Mail configuration” interface.

The image shows a web interface titled "Mail config". It contains several input fields: "From Email:" with "test10007@gmail.com", "User Name:" with "test10007@gmail.com", "Password:" with "XXXXXXXX", "Server address:" with "smtp.gmail.com", and "SMTP Port:" with "25". There is a "Secure Connection" dropdown menu set to "not required". Below these fields are two buttons: "Use default" and "test your account settings". At the bottom, there is a section for "Receival email address:" with a large text input field and a smaller "Receival email address:" label. Below this are two buttons: "Add" and "Delete".

1. From Email: sender's e-mail address.
2. User name and password: sender's user name and password.
3. Server address: SMTP server address (ex. smtp.gmailx.com).
4. Select the secure connection type at the Secure Connection pull down list according to the smtp server authentication requirements.
5. Receival email address list: List of all receiving email addresses
6. Receival email address: Type in a receiving email address
7. After all, parameters set up, you can click “Test your account settings”. If email sent successful, a “Test Successful” window will pop up, if not, users can try other email addresses or check the smtp settings.

Notice: If you change the static IP into PPPoE and select mailbox, there will be an e-mail sent to your mail box for notifying a new IP address.

4.5.9 FTP Setting

Go to Network Configuration→FTP Setting interface as shown below.

Server name	Server address	Port...	User Name	Upload path:

AddModifyDeleteTest

- 1. Add: Click Add button to input FTP server’s server name, address, port number, user name, password, and upload path, click OK to confirm the setting.
 - 2. Modify: Click this button to change some information of the FTP server.
 - 3. Delete: Select certain FTP account. Click this button to delete this account.
 - 4. Test: Select certain FTP account. Click this button to test its validity.
- Please refer to the following table for parameters and instructions of FTP configuration.

Parameter	Meaning
Server name	The name of the FTP server
Server address	The address of the FTP server
Port	The port number of the FTP server
User name	The user name of the FTP server
Password	The password of the FTP server
Path	The save path for FTP files

Add

Server name:

Server address:

Port:

User Name:

Password:

Confirm Password:

Path:

OKCancel

4.6 Advanced Configuration


Advanced configuration includes five submenus: User Configuration, Security Configuration, Configure Backup & Restore, Reboot, and Upgrade.

4.6.1 User Configuration

Go to Advanced configuration → User Configuration interface.

Add user:

1. Clicking “Add” button pops up “Add user” dialog box.

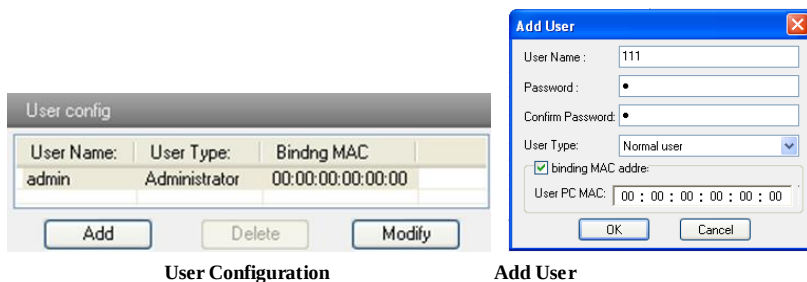


Note: After binding physical address to the IP-CAM, you can access the device on this PC in network only. If the MAC address is “00:00:00:00:00:00”, it means the camera can be connected to any computers.

2. Input user name in “User Name” textbox (only letters).
3. Input characters in “Password” and “Confirm Password” textbox (letters or numbers).
4. Input the MAC address of the PC in “Binding MAC address” textbox.
5. Click “OK” button and then the new added user will display in the user list.

Modify user:

1. Select the user which needs to modify password and physical address in the user configuration list box.
2. Clicking “Modify” button will pop up “Modify user” dialog box as shown below.

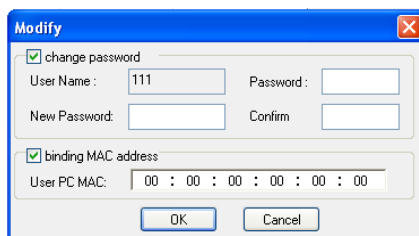

Modify User

3. Input original password of this user in the “Password” text box.
4. Input new password in the “New password” and “Confirmation” text box.
5. Input computer’s physical address which is used to access the server in the “User PC MAC” text box.
6. Click “OK” button to modify password and binding MAC address successfully.

Delete user:

1. Select the user which needs to delete in the user configuration list box.
2. Clicking “Delete” button will pop up a confirm dialog box. Then click “OK” to delete the user.

Note: The default super administrator cannot be deleted.

<i>Parameter</i>	<i>Meaning</i>
User Name	User name to operate the logon client end
User Type	Type of users, normal user, advanced user and super administrator
Binding MAC address	The MAC addresses of user access the server which should set up according to actual MAC address of server.
Password	Password to log in the client terminal
Confirm Password	Password to log in the client terminal

4.6.2 Security Configuration

1. Go to Advanced Configuration→Security Configuration to see a tab shown below.
2. Check “Enable IP address” check box, select “Deny the following IP address”, input IP address in the IP address list box and click “Add” button. Then this IP address will display in the list box; the operation step of “Allow the following IP address” is the same with “Deny the following IP address”
3. Select the IP address which needs to be deleted from the IP address list box and click “Delete” button to delete that IP address.
4. Check “Enable MAC address” check box, select “Deny the following MAC address” or “Allow the following MAC address” input MAC address in the MAC address list box and click “Add” button. Then this MAC address will display in the list box.
5. Select the MAC address which needs to be deleted from the MAC address list box and click “Delete” button to delete that MAC address.
6. Click “Save” button to save the above setting.

The image shows two configuration panels. The top panel, titled "IP address filter setting", has a checked checkbox for "Enable IP address filtering". Below it are two radio buttons: "Deny the following IP address" (selected) and "Allow the following IP address". There is a large empty text box for listing IP addresses, with "Add" and "Delete" buttons to its right. The bottom panel, titled "MAC filter setting", has a checked checkbox for "Enable MAC address filtering". It also has two radio buttons: "Deny the following MAC address" (selected) and "Allow the following MAC address". There is a large empty text box for listing MAC addresses, with "Add" and "Delete" buttons to its right. At the bottom right of this panel is a MAC address field showing "00 : 00 : 00 : 00 : 00 : 00".

4.6.3 Configure Backup & Restore

Go to Advanced configuration → Configure Backup & Restore Interface.

- **Import & Export Configuration:**

You can import or export the setting information from PC or to device.

1. Click “Browse” to select save path for import or export information on PC.
2. You can import or export all setting information to PC. “User Configuration” and “Network Configuration,” cannot be exported.

The image shows a configuration interface with three sections. The "Import setting" section has a "Path" input field with a "Browse" button to its right. Below the path field is a dropdown menu set to "All configuration exception for", followed by two checkboxes: "User Config" (checked) and "Network Config" (unchecked). An "Import setting" button is below these. The "Export setting" section has an "Export setting" button. The "Default setting" section has a "Load Default" button.

- **Default Configuration**

Click “Load default” button to restore all system settings to the default status.

4.6.4 Reboot

Go to Advanced configuration—Reboot to see an interface as shown below

Click “Reboot” button to reboot the device.

The image shows a simple interface with a title bar labeled "Reboot". Below the title bar is a single "Reboot" button.

4.6.5 Upgrade

Go to Advanced Configuration—Upgrade interface as shown below.




The screenshot shows a web interface titled "Upgrade". It contains a text input field labeled "Path" with a blue border. To the right of the input field is a blue button labeled "Browse". Below the input field is a yellow button labeled "Update server firmware".


1. Click “Browse” button to select the save path of the upgrade file.
2. Click “Upgrade server firmware” button to start upgrading the application program.
3. The device will restart automatically.
4. After you successfully update the software, click “OK” button to close IE and then re-open IE to connect IP-CAM.

Notice: You can’t disconnect to PC or close the IP-CAM during upgrade.

Click “Picture” icon and search the images saved in the SD card.

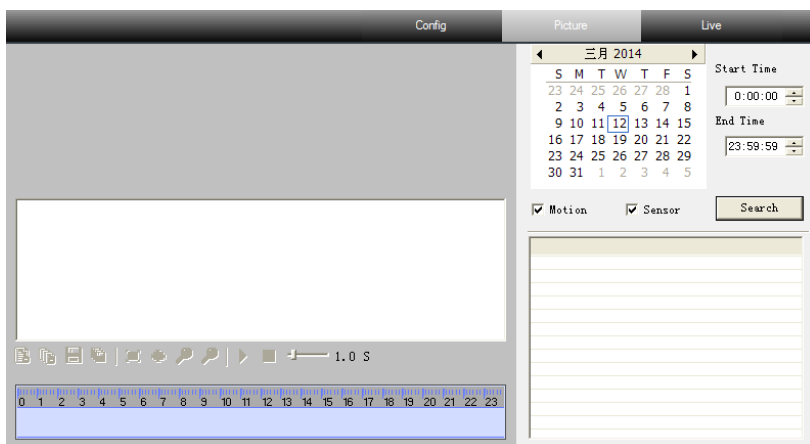

1. Set time: Select date in the “Calendar” and choose the start and end time.
2. Choose event “Motion” or “Sensor”.
3. Click “Search” button to search the picture.
4. Double click a filename or select a filename and then click “View” button in the list box to view captured pictures.

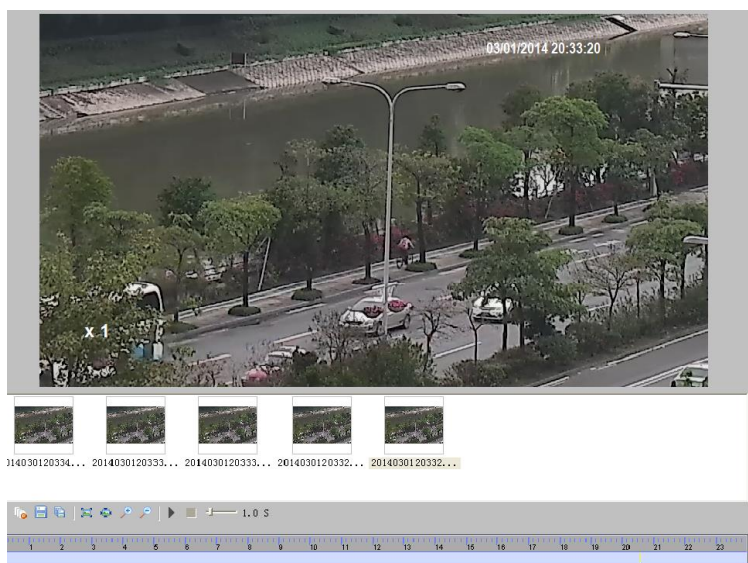

<i>Item</i>	<i>Buttons</i>	<i>Explanations</i>
1		Close: Select certain picture and click this button to close this picture.
2		Close all: Click this button to close all pictures viewing.
3		Save: Click this button to select the save path of the picture file on the PC for saving the current picture.
4		Save all: Click this button to select the save path of the picture files on PC for saving all pictures.
5		Fit size: The picture will fit on screen by clicking this button.
6		Actual size: Click this button to display the actual size of the picture as required.
7		Zoom in: Click this button to amplify the picture.
8		Zoom out: Click this button to zoom out the picture.
9		Slide play: Click this button to play the picture in slide show mode.
10		Stop: Click this button to stop slide show.
11		Play speed: Play speed of the slide show.

Q: How to find my password if I forget it?

A: Reset the device to the default factory settings.

Default IP: 192.168.226.201

User name: admin

Password: 123456

Q : Fail to connect devices through IE browser, why?

A: Network is not well connected. Please check the connection and make sure it is connected well.

B: IP is not available. Reset the valid IP.

C: Web port number has been revised: contact administrator to get the correct port number.

D: Exclude the above reasons. Recover default setting by IP-Tool.

Note: Default IP: 192.168.226.201, mask number: 255.255.255.0

Q : IP tool cannot search devices, why?

A: It may be caused by the anti-virus software in your computer. Please exit it and try to search device again.

Q : IE cannot download ActiveX control. How can I do?

a. Proceed to do the following in Internet Explorer:

Click on Tools (cog wheel top right corner) > Internet Options > Security > Click Custom level > Scroll to **DOWNLOAD UNSIGNED ACTIVE X CONTROLS** > set it to **PROMPT** > Click OK.

b. Other plug-ins or anti-virus blocks ActiveX. Please temporarily disable your anti-virus Windows Firewall/Defender.


Q : No sound can be heard, why?

A: Audio input device is not connected. Please connect and try again.

B: Audio function is not enabled at the corresponding channel. Please check AUDIO item to enable this function.

Appendix 1 — Installation of Water-proof Rubber Plug

For the purpose of better water-proof, the rubber plugs are attached to some network bullet cameras. You may mount the rubber plugs to the mounting base of the camera as required when installing. The installation instructions are as follows.

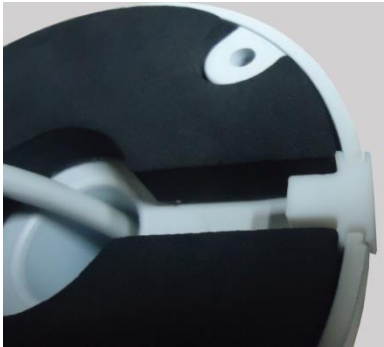

Appendix 2 — Specifications

Specification /Model		Network Box Camera
Camera	Image Sensor	1/1.8 " CMOS
	Image Size	2592×1944
	Electronic Shutter	1/25s~1/100000s
	Auto Iris	DC drive
	Min. Illumination	Color: 0.01lux@F1.2 , AGC ON: B/W: 0.001lux@F1.2 , AGC ON
	Lens	NO
	Lens Mount	C/CS
	Day&Night	ICR
	WDR	Digital WDR
	Digital NR	3D DNR
Image	Video Compression	H.265/H.264/MJPEG
	H.265Type	Main Profile @Leve4.1 High Tier
	Video Bit Rate	64Kbps~10Mbps
	Resolution	5MP(2592×1944), 2K(2560×1440), 1080P(1920×1080), 720P(1280×720), D1, CIF, 480×240
	Main Stream	60Hz: 5MP(1~30fps) / 2K(1~30fps) / 1080P(1~30fps) / 720P(1~30fps) 50Hz: 5MP(1~25fps) / 2K(1~25fps) / 1080P(1~25fps) / 720P(1~25fps)
	Image Settings	Saturation, Brightness, Chroma, Contrast, Wide Dynamic, Sharpen, NR, etc. adjustable through client or web browser
	ROI	Support
Interfaces	Network	1 RJ45 10M/100M/100M port
	Video	CVBS output (BNC ×1)
	Auido	MIC IN×1; MIC OUT×1
	Storage	Support SD card, up to 64GB
	RS485	Support
	Alarm	1CH alarm input; 1 CH alarm output
Fucntion	Remote Monitoring	IE browser, CMS remote control
	Online Connection	Support simultaneous monitoring for up to 10 users and multi-stream transmission
	Network Protocol	TCP/IP, UDP, DHCP, NTP, RTSP, PPPoE, DDNS, SMTP, FTP
	Interface Protocol	ONVIF, GB-T/28181-2011
	Storge	SD card storage; network remote storage
	Smart Alarm	Motion alarm; sensor alarm
	Power	DC12V/PoE; AC24V optional
	Power Consumption	< 3W(ICR OFF)
	Operating Environment	Temperature: -20°C~50°C; Humidity: 10%~90%
	Dimension (mm)	W70mm × D145mm ×H60mm
	Installation	Wall mounting

Specification /Model		50m IR Water-proof Bullet Network Camera		70m IR Water-proof Bullet Network Camera	
Camera	Image Sensor	1/1.8 " CMOS			
	Image Size	2592×1944			
	Electronic Shutter	1/25s~1/100000s			
	Auto Iris	Fixed Iris			
	Min. Illumination	0.01lux@F1.2, AGC ON: 0 lux with IR			
	Lens	5mm@F2.2, angle of view: 72°	3.6~10mm@F1.4, angle of view: 83.7°~36.7°	5mm@F2.2, angle of view: 72°	3.6~10mm@F1.4, angle of view: 83.7°~36.7°
	Lens Mount	CS	Ø14	CS	Ø14
	Day&Night	ICR			
	WDR	Digital WDR			
	Digital NR	3D DNR			
	Angle Adjustment	Any angle			
Image	Video Compression	H.265/H.264/MJPEG			
	H.265 Type	Main Profile @Leve4.1 High Tier			
	Video Bit Rate	64Kbps~10Mbps			
	Resolution	5MP(2592×1944), 2K(2560×1440), 1080P(1920×1080), 720P(1280×720), D1, CIF, 480×240			
	Main Stream	60Hz: 5MP(1~30fps) / 2K(1~30fps) / 1080P(1~30fps) / 720P(1~30fps) 50Hz: 5MP(1~25fps)/ 2K(1~25fps) / 1080P(1~25fps) / 720P(1~25fps)			
	Image Settings	Saturation, Brightness, Chroma, Contrast, Wide Dynamic, Sharpen, NR, etc. adjustable through client or web browser			
	ROI	Support			
Interfaces	Network	1 RJ45 10M/100M/100M port			
	Video	CVBS output (BNC ×1)			
	Auido	MIC IN×1; MIC OUT×1			
	Storage	Support TF card, up to 64GB		Support SD card, up to 64GB	
	RS485	Support			
Fucntion	Alarm	1CH alarm input; 1 CH alarm output			
	Remote Monitoring	IE browser, CMS remote control			
	Online Connection	Support simultaneous monitoring for up to10 users and multi-stream transmission			
	Network Protocol	TCP/IP, UDP, DHCP, NTP, RTSP, PPPoE, DDNS, SMTP, FTP			
	Interface Protocol	ONVIF, GB-T/28181-2011			
	Storge	TF card storage; network remote storage		SD card storage; network remote storage	
Others	Smart Alarm	Motion alarm; sensor alarm			
	IR Distance	30~50 m		50~70 m	
	Protection Grade	IP66			
	Power	DC12V/PoE			
	Power Consumption	< 3W(ICR OFF); < 7.5W(ICR ON)			
	Operating Environment	Temperature: -20°C~50°C; Humidity: 10%~90%			
	Dimension (mm)	Ø109mm×284mm		Ø109mm×360mm	
	Weight (net)	1132g		1717g	
Installation	Wall mounting; pendent mounting				

Specification /Model		Vandal-proof Dome Netowrk Camera			
Camera	Image Sensor	1/1.8 " CMOS			
	Image Size	2592×1944			
	Electronic Shutter	1/25s~1/100000s			
	Auto Iris	Fixed Iris			
	Min. Illumination	0.01lux@F1.2, AGC ON: 0 lux with IR		Color: 0.01lux@F1.2, AGC ON; B/W: 0.001lux@F1.2, AGC ON	
	Lens	5mm@F2.2, angle of view: 72°	3.6~10mm@F1.4, angle of view: 83.7°~36.7°	5mm@F2.2, angle of view: 72°	3.6~10mm@F1.4, angle of view: 83.7°~36.7°
	Lens Mount	CS	Ø14	CS	Ø14
	Day&Night	ICR			
	WDR	Digital WDR			
	Digital NR	3D DNR			
	Angle Adjustment	Pan: 0°~360°; Tilt: 0°~77°; Rotation:0°~360°			
Image	Video Compression	H.265/H.264/MJPEG			
	H.265 Type	Main Profile @Leve4.1 High Tier			
	Video Bit Rate	64Kbps~10Mbps			
	Resolution	5MP(2592×1944), 2K(2560×1440), 1080P(1920×1080), 720P(1280×720), D1, CIF, 480×240			
	Main Stream	60Hz: 5MP(1~30fps) / 2K(1~30fps) / 1080P(1~30fps) / 720P(1~30fps) 50Hz: 5MP(1~25fps)/ 2K(1~25fps) / 1080P(1~25fps) / 720P(1~25fps)			
	Image Settings	Saturation, Brightness, Chroma, Contrast, Wide Dynamic, Sharpen, NR, etc. adjustable through client or web browser			
	ROI	Support			
Interfaces	Network	1 RJ45 10M/100M/100M port			
	Video	CVBS output (BNC ×1)			
	Auido	MIC IN×1; MIC OUT×1			
	Storage	Support TF card, up to 64GB			
	RS485	Support			
	Alarm	1CH alarm input; 1 CH alarm output			
Fucntion	Remote Monitoring	IE browser, CMS remote control			
	Online Connection	Support simultaneous monitoring for up to10 users and multi-stream transmission			
	Network Protocol	TCP/IP, UDP, DHCP, NTP, RTSP, PPPoE, DDNS, SMTP, FTP			
	Interface Protocol	ONVIF, GB-T/28181-2011			
	Storge	TF card storage; network remote storage			
	Smart Alarm	Motion alarm; sensor alarm			
Others	IR Distance	20~30 m		NO	
	Protection Grade	IP66&IK10			
	Power	DC12V/PoE			
	Power Consumption	< 3W(ICR OFF); < 5.5W(ICR ON)			
	Operating Environment	Temperature: -20°C~50°C; Humidity: 10%~90%			
	Dimension (mm)	Ø161mm×137.3mm			
	Weight (net)	1255g			
	Installation	Pendent mounting (wall mounting available with junction box and bracket)			